

## BRÜEL & KJÆR® Data Analysis Software


### BK Connect FFT, CPB and Overall Analysis Applets

*BK Connect® applets are for customers looking for a point solution that works like they work, providing just what you need in a user-friendly solution. The applets provide the same reliability and thought-through design of an advanced sound and vibration analysis software platform, in a small, self-contained package.*

*The BK Connect FFT, CPB and Overall Analysis Applets are specifically for standard sound and vibration tests using narrow-band FFT, CPB (constant percentage bandwidth or 1/3-octave) or overall analysis on both stationary and non-stationary signals. Tests can be performed using a single analysis method, or all three simultaneously.*

*There are two applets that provide full FFT, CPB and overall analysis testing solutions so that you can complete the job at hand:*

- **Type 8490-C-N-SYS** – Go from data acquisition and monitoring to measurement, recording, analysis and reporting
- **Type 8490-H-N-SYS** – All-in-one solution for post-processing of time data, data management and reporting

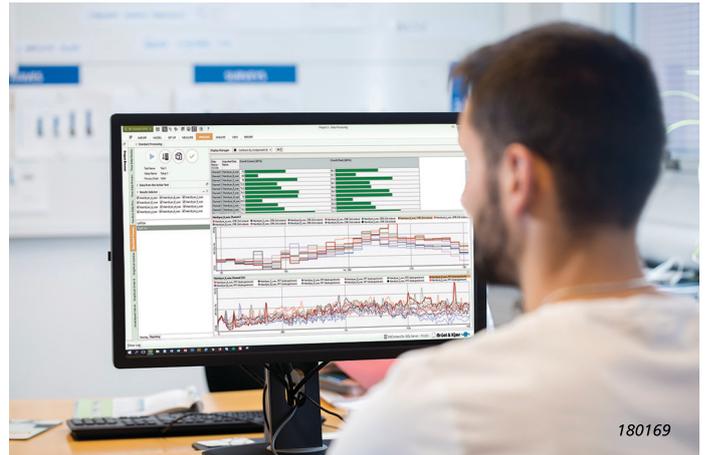

### Uses and Features

#### Uses

##### **Type 8490-C – Applet for acquisition, recording, batch post-processing, data management and reporting**

- General sound and vibration data acquisition, analysis and reporting
- Time data recording
- Batch processing of multiple sets of time recordings
- FFT spectrum analysis for mobility measurements, vibration diagnostics or narrow-band analysis of acoustic signals
- Standardized digital filter-based analysis using 1/3-octave for the determination of sound power levels
- Broadband overall analysis for characterization of noise or vibration signals
- Stationary and non-stationary analysis
- Analysis with different filter settings and FFT bandwidths

##### **Type 8490-H – Applet for batch post-processing, data management and reporting**

- General sound and vibration analysis and reporting
- Batch processing of multiple sets of time recordings
- FFT spectrum analysis for mobility measurements, vibration diagnostics or narrow-band analysis of acoustic signals
- Standardized digital filter-based analysis using 1/3-octave for the determination of sound power levels
- Broadband overall analysis for characterization of noise or vibration signals
- Stationary and non-stationary analysis
- Analysis with different filter settings and FFT bandwidths

#### Features

- User interface, task completion and data organization optimized to fit the job at hand – with tools and components that make FFT analysis quick and easy
- Simultaneous multi-analysis of the same recorded data – FFT, 1/3-octave and overall analysis, with the possibility to define different parameters such as frequency span, zoom, etc.
- Visualization, editing and audio playback of time data after recording and in preparation for analysis
- Simple and efficient reporting of results with user-definable layouts metadata
- Embedded reporting using Microsoft® Office products to integrate report creation directly in the test process
- Easy to learn and use, reducing training and test time

## About BK Connect FFT, CPB and Overall Analysis Applets

With Type 8490-C, you can record and perform order analysis in one seamless workflow. A complete set of real-time monitors is preconfigured, and a targeted process (analysis) chain is predefined – ready for you to start analysis. If needed, you can adjust monitor parameters and analysis properties to suit your test specifications. When ready, record data using the simple recorder located in the monitors.

Using the same predetermined processing and analysis tools as Type 8490-C, post-processing applet Type 8490-H allows you to target the post-processing of recorded time data.


Both applets provide eight different predefined setups:

- Stationary tests that allow you to perform standard analyses
  - FFT – FFT spectrum analysis that includes FFT frequency band extraction
  - CPB – 1/3-octave analysis using standard filters

- Overall – Broadband analysis that includes integration/differentiation pre-processing
- FFT, CPB, Overall – Simultaneous multi-analysis using all of the above methods
- Non-stationary tests that allow you to perform time-varying analysis
  - FFT – Time varying FFT spectrum analysis that includes FFT frequency band extraction
  - CPB – Time-varying 1/3-octave analysis that includes CPB frequency band extraction
  - Overall – Time-varying broadband analysis that includes integration/differentiation pre-processing
  - FFT, CPB, Overall – Simultaneous multi-analysis using all of the above methods

The user-friendly interface provides automated batch processing of data, immediate display and storage of analysis results and automated reporting.

Fig. 1 Example of analysis setup: Stationary FFT, CPB and overall analysis

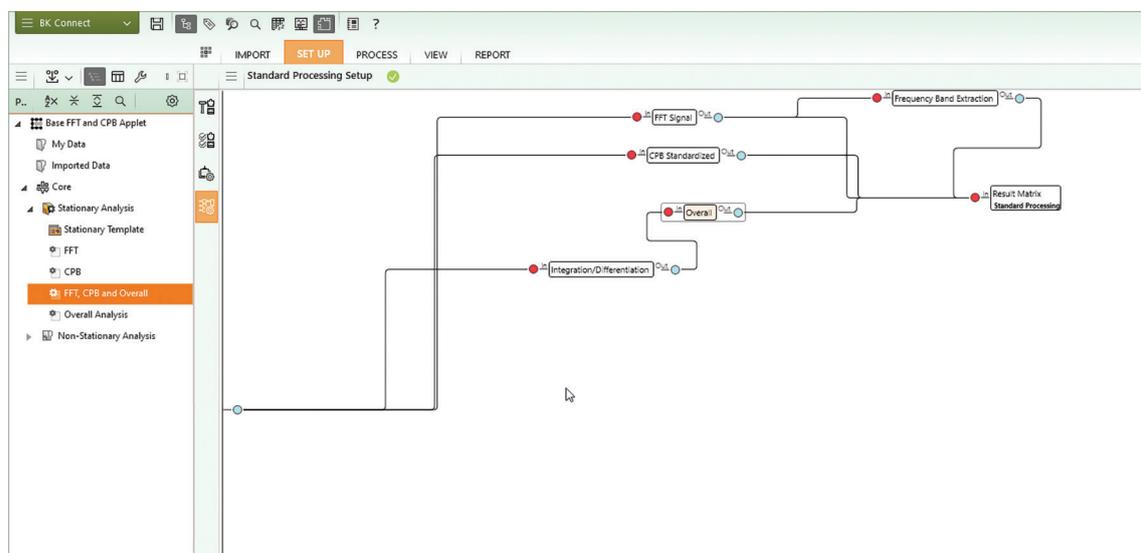

### Utilizing BK Connect Application Components

To generate an efficient workflow, the applets take advantage of many of the task-oriented and user-friendly features that are found in full-version BK Connect applications, including:


- In both Type 8490-C and Type 8490-H:
  - Standard Processing Setup and Standard Processing tasks for adjusting the analysis properties and executing the predefined process chains
  - Time Editor for review and editing of time signal including post-processing of BK Connect recordings, Brüel & Kjær sound level meter data or HBM Tescia® data
  - Hardware Browser and Monitor components for a graphical overview and validation of your front end channels
  - Transducer Manager and Verification tasks for configuration and calibration of connected transducers
  - Generator Setup for setting up the generator output in LAN-XI modules with a signal generator
  - Result Matrix and Display Manager processing tools to review results and set up preferred result displays
- In Type 8490-C only:
  - Hardware Browser and Monitor components for a graphical overview and validation of your front-end channels

- Transducer Manager and Verification tasks for configuration and calibration of connected transducers
- Generator Setup for setting up the generator output in LAN-XI modules with a signal generator

To review any data in the current project data including imported data, as well as data stored in the database, you can use the Result Matrix Viewer task.

The applets also include some basic data viewing functionality that a standard BK Connect user would have, such as: access to all the metadata attributes; Microsoft® PowerPoint®-based reporting; exporting to Microsoft® Excel®; and BK Connect Notes for on-screen notations.

Fig. 2 Processing in the FFT, CPB and Overall Analysis Applet

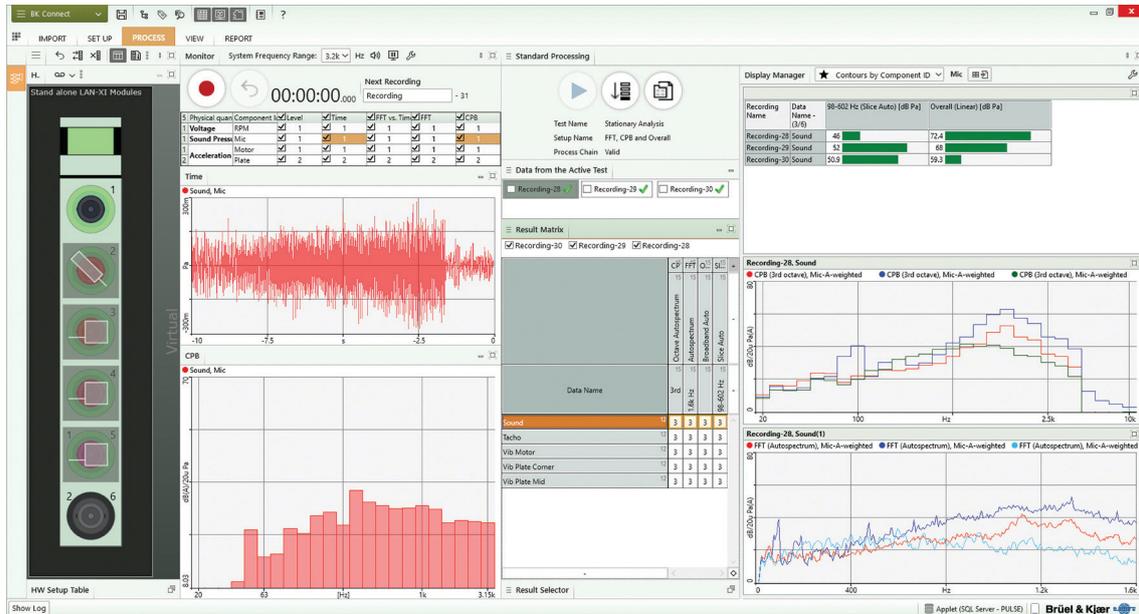

### Automated Operations

The applets' many automated operations makes it easy for the novice user and is perfect for repetitive testing:

- Auto-detection of hardware – The software will automatically detect connected LAN-XI data acquisition modules and TEDS-enabled transducers
- Data source management – Select a default data source for processing, the software will always draw data from that source
- Auto-analysis start – If selected, the software will automatically start analysis as soon as data is available for the Standard Processing task

- Auto-sizing of active window – If selected, the software will automatically maximize the window of the active task/component
- Result selector – Select a default combination of outputs and display layout, the software will always display and store these results
- Reporting – Set up a report, with a simple click a report will be created using the predefined template and stored with the project
- Done management – Select a default task completion operation, the software will always perform this task when you complete a task

### Hardware Support

Type 8490-C can be used with any single module within the LAN-XI data acquisition hardware platform, including LAN-XI Light Types 3676 and 3677. This means that anywhere between 4 to 12 channels are supported. If additional channels are required that will require more than one module, then you need to use a full version BK Connect application.

## Specifications – BK Connect FFT, CPB and Overall Analysis Applets

The software is delivered via download option or USB installation media.

### System

#### PC SYSTEM REQUIREMENTS

- Windows® 10 Pro or Enterprise (x64) with either Current Branch (CB), Current Branch for Business (CBB), Semi-annual Channel (Targeted) or Semi-annual Channel servicing model
- Windows® 11 Pro or Enterprise (x64) with either Current Branch (CB), Current Branch for Business (CBB), Semi-annual Channel (Targeted) or Semi-annual Channel servicing model
- Microsoft® Office 2019 (x32 or x64) or Office 2021 (x32 or x64)
- Microsoft® SQL Server® 2019 (SQL Server 2019 Express included with software)

#### RECOMMENDED MINIMUM PC

- Intel® Core™ i9, 3 GHz processor or better
- 32 GB RAM
- 1 TB Solid State Drive (SSD) with 100 GB free space, or better
- 1 Gbit Ethernet network\*
- Microsoft® Windows® 10 Pro or Enterprise (x64) with CB
- Microsoft® Office 2021 (x32)
- Microsoft® SQL Server® 2019
- Screen resolution of 1920 × 1080 pixels (full HD)

#### FRONT END

Required for real-time measurements and recording

Front-end Support: One LAN-XI-based data acquisition module

#### Import/Export

<b>SUPPORTED DATA FORMATS</b>	<ul style="list-style-type: none"> <li>.bkc (BK Connect native format) – both function and time data</li> <li>.pti – PULSE LabShop and HBK Tescia time data</li> <li>.wav – time data</li> <li>.csv (based on a predefined format):                             <ul style="list-style-type: none"> <li>Recording data (even abscissa time domain)</li> <li>2D complex-valued frequency domain data</li> <li>2D real-valued frequency domain data (FFT and CPB)</li> </ul> </li> </ul>
<b>PROJECT FILE EXPORT AND IMPORT</b>	Export a project to an external “transport” file (*.BKConnectTemplate or *.BKConnectProject), with or without imported or processed data, for archiving outside the database, sharing with other BK Connect users, capturing a snapshot of a particular state, or creating a project template

#### Data Display

Displays enable viewing and comparison of measurements and results. Data is dragged-and-dropped to/from the Project Browser. The User-defined Display task is the container for displaying graphical results

<b>GRAPH TYPES</b>	Display of functions <table border="1" style="width: 100%;"> <tr> <td> <ul style="list-style-type: none"> <li>Waterfall</li> <li>Waterfall (step)</li> <li>Colour contour (3 variants)</li> <li>Campbell diagram</li> <li>Bar</li> </ul> </td> <td> <ul style="list-style-type: none"> <li>Line</li> <li>Curve</li> <li>Curve (step)</li> <li>Overlay</li> <li>Overlay (all)</li> <li>Multi-value</li> </ul> </td> </tr> </table>	<ul style="list-style-type: none"> <li>Waterfall</li> <li>Waterfall (step)</li> <li>Colour contour (3 variants)</li> <li>Campbell diagram</li> <li>Bar</li> </ul>	<ul style="list-style-type: none"> <li>Line</li> <li>Curve</li> <li>Curve (step)</li> <li>Overlay</li> <li>Overlay (all)</li> <li>Multi-value</li> </ul>
<ul style="list-style-type: none"> <li>Waterfall</li> <li>Waterfall (step)</li> <li>Colour contour (3 variants)</li> <li>Campbell diagram</li> <li>Bar</li> </ul>	<ul style="list-style-type: none"> <li>Line</li> <li>Curve</li> <li>Curve (step)</li> <li>Overlay</li> <li>Overlay (all)</li> <li>Multi-value</li> </ul>		
<b>SUPERIMPOSED GRAPHS</b>	A number of functions can be superimposed on the same curve graph		
<b>AXES</b>	<ul style="list-style-type: none"> <li>X-axis Scale: Linear, logarithmic and CPB</li> <li>Y-axis Scale: Linear, logarithmic and dB</li> <li>Z-axis Scale: Linear and logarithmic</li> </ul>		
<b>COMPLEX DISPLAYS</b>	<table border="1" style="width: 100%;"> <tr> <td> <ul style="list-style-type: none"> <li>Real</li> <li>Imaginary</li> <li>Magnitude</li> </ul> </td> <td> <ul style="list-style-type: none"> <li>Phase</li> <li>Nyquist</li> <li>Bode</li> </ul> </td> </tr> </table>	<ul style="list-style-type: none"> <li>Real</li> <li>Imaginary</li> <li>Magnitude</li> </ul>	<ul style="list-style-type: none"> <li>Phase</li> <li>Nyquist</li> <li>Bode</li> </ul>
<ul style="list-style-type: none"> <li>Real</li> <li>Imaginary</li> <li>Magnitude</li> </ul>	<ul style="list-style-type: none"> <li>Phase</li> <li>Nyquist</li> <li>Bode</li> </ul>		

<b>SPECTRAL UNITS</b>	<ul style="list-style-type: none"> <li>Root mean square (RMS)</li> <li>Power (PWR)</li> <li>Power spectral density (PSD)</li> <li>Energy spectral density (ESD)</li> </ul>	<ul style="list-style-type: none"> <li>Root mean square spectral density (RMSSD)</li> <li>Peak (Peak)</li> <li>Peak-to-Peak (PkPk)</li> </ul>
<b>ACOUSTIC POST-WEIGHTING</b>	A-, B-, C-, D-, L-weighting	
<b>j<math>\omega</math> WEIGHTING</b>	1/j $\omega^2$ , 1/j $\omega$ , 1, j $\omega$ , j $\omega^2$ (single and double integration and differentiation)	
<b>CURSOR TYPES</b>	Depending on the display type, the following are available:	
	<ul style="list-style-type: none"> <li>Main</li> <li>Delta</li> <li>Order</li> </ul>	<ul style="list-style-type: none"> <li>Reference</li> <li>Harmonic</li> <li>Sideband</li> </ul>
	<b>Alignment:</b> Cursors in different displays can be synchronized to allow the changes to one display to be reflected in other displays showing the same or different functions	
<b>CURSOR READINGS</b>	<ul style="list-style-type: none"> <li>Acoustic levels</li> <li>Corrected frequency</li> <li>Cursor indices and values</li> <li>Delta</li> <li>Delta/total</li> <li>Max. and min. values</li> </ul>	<ul style="list-style-type: none"> <li>Nearest harmonic</li> <li>Reference</li> <li>Resonance</li> <li>Reverberation</li> <li>Slice definition</li> <li>Status</li> <li>Total</li> </ul>

#### Data Management

Data management is based on a data model that interacts with a Microsoft® SQL Server® database. Connection to the last used database is automatic upon starting BK Connect. However, the user can connect to a different database at any time during a session. Only one database can be connected at a time.

Local database with each BK Connect installation; optionally accessible via a BK Connect service, one user at a time, over a company network

<b>DATABASE HANDLING</b>	Databases can be created, deleted, backed up and restored
<b>DATABASE MIGRATION TOOL</b>	Tool that allows users to start application using an SQLite database and at a later point migrate data to an SQL Server solution
<b>DATA STORAGE</b>	Uses a filefarm (on disk) referenced by the database to store data files, report templates, pictures. File sizes limited by disk only
<b>DATA SHARING</b>	Via external BK Common file enables one file to contain all results from a common source, including their metadata
<b>METADATA AND DEVICE UNDER TEST</b>	Defined by the user as a method to document valuable information about the test. Enables customized searching for input data and results on the BK Connect local database

#### Result Matrix Viewer

The Result Matrix Viewer provides a structured overview of results from a large number of tests, making selection and comparison very easy:

<b>RESULT LAYOUT</b>	As a matrix of signals versus analyses
<b>SMART RESULTS GROUPING</b>	Each individual cell in the matrix represents a group of similar results for which comparison is valid

\* A dedicated data acquisition network (LAN or WAN) is recommended. A network that only handles data from the front end improves the stability of the data

<b>AUTOMATIC RESULT DATA PRESENTATION</b>	Selecting a cell presents the results, either in a table view for scalars, or graphical display for function data
<b>AUTOMATIC REPORT GENERATION</b>	Reports can be generated in Microsoft® PowerPoint®, either from blank documents, or from templates prepared in advance

### Time Editor

Display, audio playback and pre-processing of time data in preparation for analysis

<b>DATA SELECTION</b>	<ul style="list-style-type: none"> <li>Automated generation of regions from multiple files having similar channel configurations – in preparation for batch processing</li> <li>Manual grouping of regions – for batch processing</li> <li>Region selection by group of channels and time range</li> <li>Append regions to other regions (concatenation)</li> <li>Save regions to project</li> </ul>
<b>DISPLAY</b>	<ul style="list-style-type: none"> <li>Fast navigation by scrolling through channels, panning and zooming in time axis</li> <li>Fast spectrogram display – synchronized with time data display &amp; playback</li> <li>Interactive order slice and frequency spectrum display synchronized with spectrogram cross-hair cursor</li> </ul>
<b>PRE-ANALYSIS</b>	<ul style="list-style-type: none"> <li>Automatic calculation of rpm profile from a tachometer pulse train</li> </ul>

### Data Processing Features

- Analysis of time data including pre-processing
- Immediate display and store of analysis results
- Automated processing using the Standard Processing task
- Automated multi-page reporting

Analzers: FFT, CPB and overall analyzers

### Process Chains

<b>PRE-ANALYSIS ELEMENTS</b>	<ul style="list-style-type: none"> <li>Integration/Differentiation</li> </ul>
<b>ANALYSIS ELEMENTS</b>	<ul style="list-style-type: none"> <li>FFT Signal</li> <li>FFT Signal vs Time</li> <li>CPB Standardized</li> <li>CPB vs Time</li> <li>Overall</li> <li>Overall vs Time</li> </ul>
<b>POST-ANALYSIS ELEMENTS</b>	<ul style="list-style-type: none"> <li>Frequency Extraction</li> </ul>
<b>GENERAL ELEMENTS</b>	<ul style="list-style-type: none"> <li>Result Matrix: Results are presented using the same functionality as in the Data Viewer's Result Matrix Viewer, where you can make predefined selections in the matrix, simplifying the process of displaying data</li> </ul>

### FFT Analysis

The following specifications apply to all FFT-based analysis

<b>FREQUENCY RANGE</b>	<ul style="list-style-type: none"> <li>Baseband and Zoom: 50 – 102400 lines</li> <li>Frequency Span: 1 Hz – 204.8 kHz in 1, 2, 5 ... or 2<sup>n</sup> (1, 2, 4, 8 ...) sequence (depending on hardware)</li> </ul>
<b>SIGNAL TYPE</b>	Random; Periodic; Transient Properties are automatically set up to a logical default; for example, when transient type is selected, Signal Trigger is selected as the triggering mode
<b>TRIGGER MODES</b>	<ul style="list-style-type: none"> <li>Free run</li> <li>Signal Trigger: Trigger attributes include level, hysteresis, slope, hold-off, delay and divider</li> </ul>
<b>TIME WEIGHTING</b>	<ul style="list-style-type: none"> <li>Exponential</li> <li>Uniform</li> <li>Transient</li> <li>Hanning</li> <li>Flat-top</li> <li>Kaiser-Bessel</li> </ul>

<b>OVERLAP</b>	User selectable values of 0%, 50%, 66.67%, and 75%, user editable from 0% to 95%
<b>OUTPUT</b>	FFT Signal: Autospectrum, Cross-spectrum, Phase-assigned Spectrum, Time, Weighted Time

### CPB Analysis

CPB operates with 1/3-octave bands. The following specifications apply to all CPB-based analysis

### Overall Analysis

The overall level analyzer meets the requirements for a class 1 instrument in IEC 61672-1, ANSI S1.43-1997 Type 1, ANSI S1.4-1983 Type 1, IEC 804-1985 and IEC 651. The following specifications apply to all overall-based analysis

<b>AVERAGING</b>	Exponential, Impulse, Linear (Leq), Linear All, True Peak, True Peak All
<b>TRIGGER METHOD</b>	Free run; Fixed time interval An auxiliary signal may be used as a trigger signal
<b>FREQUENCY SPAN</b>	1 Hz – 204.8 kHz in 1, 2, 5 ... or 2n (1, 2, 4, 8 ...) sequence
<b>ACOUSTIC WEIGHTING</b>	As signals, A, B, C, D, G

### Reporting

A separate reporting task enables templates to be created in Microsoft® PowerPoint®

**Hardware Setup Features**

<b>HARDWARE SUPPORT</b>	Support for any single LAN-XI data acquisition module or a single LAN-XI Light module
<b>TRANSDUCER MANAGER</b>	For transducer setup
<b>HARDWARE BROWSER</b>	For channel setup
<b>GENERATOR SETUP</b>	For setting up any LAN-XI module with built-in signal generator
<b>CALIBRATION</b>	Transducer calibration/verification
<b>SIGNAL MONITORING</b>	Real-time monitor including a monitor recorder

**Hardware Configuration**

The software automatically detects the front-end hardware and configures the system. If IEEE 1451.4 capable transducers (with standardized TEDS) are being used, these are detected and attached automatically to the correct input channels

**Hardware Browser**

The Hardware Browser combines the Hardware Matrix and HW Setup Table that work together to provide a highly efficient way to work with any size system

<b>HARDWARE MATRIX</b>	<p>An interactive display of the front-end hardware</p> <ul style="list-style-type: none"> <li>• Signal levels indicated using coloured rings</li> <li>• Channel overload status, using different symbols for different types of overload</li> <li>• Transducer status, using symbols to identify each transducer type</li> <li>• Calibration/verification status when used in the Transducer Verification task</li> <li>• Drop destination for transducers dragged from the Transducer Manager</li> <li>• Channel selector for the HW Setup Table and overall level meter</li> <li>• Automatic indication of TEDS transducers</li> </ul>
<b>LAYOUT VIEWS</b>	<ul style="list-style-type: none"> <li>• Square Grid: Completely dynamic. Signals form a best-fit grid in the available screen space using coloured rings to display signal amplitude</li> <li>• Bar Grid: Completely dynamic. Signals form a best-fit grid in the available screen space using bars to display signal amplitude</li> </ul> <p>Note that the grid displays can be sorted according to Signal Name, Maximum Level, Minimum Level and Level Range</p>
<b>MATRIX DISPLAY STYLES</b>	<ul style="list-style-type: none"> <li>• Physical: A visually representative display of the physical front end</li> <li>• Logical: Channels shown as coloured rings in the same configuration as the physical front end</li> </ul>
<b>HW SETUP TABLE</b>	A channel list that contains all information about the front-end hardware and any transducers connected to it. The number of rows displayed in the table depends on the channel selection made in the Hardware Matrix, the default being all channels. The size of the table updates dynamically according to which channels are selected in the Hardware Matrix, making it very easy to focus on subsets of channels when needed

<b>TABLE EDITING</b>	<ul style="list-style-type: none"> <li>• Manual editing of channel information</li> <li>• Update from an external XML or UFF 1808 (Channel Table) file or from Microsoft® Excel®</li> <li>• Save HW Setup Table contents to an external XML or UFF 1808 (Channel Table) file for later use</li> <li>• Create different (favourite) views to tailor which columns should be shown</li> </ul>
<b>BROWSER HEADER BAR</b>	<p>Tools in the Hardware Browser allow for:</p> <ul style="list-style-type: none"> <li>• Resetting of channel status</li> <li>• Reconnecting the front end</li> <li>• Display of either the HW Setup Table, the LAN-XI home page, or an overall level meter for all channels</li> </ul>

**Transducer Manager**

The Transducer Manager works with a Microsoft® Access® database (as used by PULSE LabShop) to manage transducer specifications and calibration information

<b>INCLUDED TRANSDUCERS</b>	A full set of Brüel & Kjær transducer types, with nominal sensitivities, is provided with all BK Connect installations
<b>ADDING TRANSDUCERS</b>	<p>Individual devices, or groups of devices, can be dragged and dropped onto the Hardware Matrix to add transducers to the configuration and/or add calibration/sensitivity information:</p> <ul style="list-style-type: none"> <li>• Drag a transducer type to many (or all) channels. The HW Setup Table applies the nominal sensitivity for that type to the selected channel(s)</li> <li>• (Typical) Drag specific devices to individual channels where they are known to be physically connected</li> </ul>
<b>DATABASE</b>	Each transducer type can have a number of devices of that type, each with its own unique calibration history

**Transducer Verification**

Transducer Verification (under Setup) can be used either to verify that transducers are functioning correctly, or to make a new calibration. A transducer calibrator is used to apply the necessary excitation for either verification or calibration. Multiple calibrators can be used simultaneously.

The software automatically detects the calibrator signal and performs the verification/calibration, with coloured status indicators in the Hardware Matrix and HW Setup Table showing In Progress, Failed or Passed. At the end of the procedure, the Transducer Manager is updated along with the HW Setup Table and calibration information is added to the device's calibration history

**Generator Setup**

<b>SETUP</b>	Graphical tools can be used for setting up excitation type, frequency parameters, output level, level ramp up/down times, and whether burst excitation is to be used	
<b>GENERATOR SIGNAL TYPES</b>	<ul style="list-style-type: none"> <li>• Sine (fixed frequency)</li> <li>• Continuous and Burst Random</li> </ul>	<ul style="list-style-type: none"> <li>• Periodic and Pseudo-random</li> <li>• Periodic chirp</li> </ul>

## Real-time Monitor

<b>MONITORS</b>	Channel monitor (time, CPB or FFT), channel level meter, channel level history, elapsed time, rpm profile, tachometer. Includes generator stop/start control buttons
<b>FFT MONITOR</b>	Monitors 2D spectra or 3D spectrograms for all active channels or selected channels. Grouped automatically based on the physical quantity
<b>CPB MONITOR</b>	Monitors 2D spectra for all active channels with the option to apply acoustic weighting to sound pressure signals. Channels are grouped automatically based on the physical quantity
<b>LEVELS MONITOR</b>	Monitors the overall levels displayed in voltage or physical quantity for all active or selected channels. The data can be monitored as instantaneous level or max. hold, using slow, fast or impulsive time weighting
<b>TIME MONITOR</b>	Monitors the complete raw time history for the entire length of the recording, while overlaying overload and marker locations

## Measurement

<b>1/3-OCTAVE FILTERS</b>	6-pole filters with centre frequencies given by $10^{n/10}$ , where $-10 \leq n \leq 52$ (63 filters). Filters with centre frequencies from 266 mHz to 160 kHz that meet the requirements of: <ul style="list-style-type: none"> <li>• IEC 61260-1 Class 1</li> <li>• IEC 1260-1995 Class 1</li> <li>• IEC 225-1966</li> <li>• ANSI S1.11-2004 Class 1</li> <li>• ANSI S1.11-1986 Order 7 Type 1-D</li> <li>• ANSI S1.11-1966 Class 1 Type E</li> <li>• DIN 45651 (1964-01)</li> </ul>
<b>CPB SPECTRUM AVERAGING</b>	<ul style="list-style-type: none"> <li>• Linear (fixed time range)</li> <li>• Linear All (full time range)</li> <li>• Exponential</li> </ul>
<b>MAX./MIN. SPECTRUM HOLD</b>	Max./Min. Hold of spectrum for exponential averaging mode
<b>ACOUSTIC WEIGHTING</b>	Perform acoustic weighting on sound pressure signals before CPB analyses. Select between A, B, C, D and G-weighting
<b>OVERALL BANDS</b>	Process overall bands in parallel with the CPB spectra. The overall bands can be acoustic weighted
<b>MEASUREMENT MODE</b>	<ul style="list-style-type: none"> <li>• Initialize analysis system</li> <li>• Generator start/stop</li> <li>• Measurement start/stop</li> </ul> The averaging setup can be adjusted from within this mode

## Ordering Information

Type 8490-C-N-SYS\* FFT, CPB and Overall Analysis Applet

Type 8490-H-N-SYS\* FFT, CPB and Overall Post-analysis Applet

### SOFTWARE MAINTENANCE AND SUPPORT AGREEMENTS†

M1-8490-C-N-SYS Agreement for Type 8490-C-N

M1-8490-H-N-SYS Agreement for Type 8490-H-N

### OTHER BK CONNECT PRODUCTS

For an overview of all BK Connect applications and applets, visit the [BK Connect page](#) on the Brüel & Kjær website.

**NOTE:** Applets cannot be upgraded to full-version applications or added to other applets

\* "N" indicates the licence is node locked to a PC or dongle. Floating licences not available

† Agreement expiration date to be agreed at time of contract

Teknikerbyen 28 · DK-2830 Virum · Denmark  
Telephone: +45 77 41 20 00 · Fax: +45 45 80 14 05  
[www.bksv.com](http://www.bksv.com) · [info@hbkworld.com](mailto:info@hbkworld.com)  
Local representatives and service organizations worldwide

To learn more about all HBK offerings, please visit [hbkworld.com](http://hbkworld.com)

Although reasonable care has been taken to ensure the information in this document is accurate, nothing herein can be construed to imply representation or warranty as to its accuracy, currency or completeness, nor is it intended to form the basis of any contract. Content is subject to change without notice – contact HBK for the latest version of this document.

Brüel & Kjær and all other trademarks, service marks, trade names, logos and product names are the property of Hottinger Brüel & Kjær A/S or a third-party company.

